



## System Firmware Update Instructions For BDP-140 (USB Update)

NOTE: If you have any difficulty carrying out these instructions, please first refer to the System Firmware Update FAQ included in this document and/or contact Pioneer Customer Support Center.

### A. Check the current firmware version of the player:

Using the player's remote control:

1. Press the "STANDBY/ON" button to switch the unit on.  
Note: If the player starts to play a disc, press the "STOP" button and wait until the Pioneer logo is displayed on your TV.
2. Press the "HOME MENU" button to display the "Home Menu".
3. Select "Initial Setup" and press the "ENTER" button.
4. Select "Options" and press the "ENTER" button.
5. Select "System information" and press the "ENTER" button.
6. Select "Next Screen" and press the "ENTER" button
7. The firmware version of your player will be displayed on the TV screen.

If the version number is **V01.08** or higher, it is not necessary to update the firmware. If the version number is lower than **V01.08**, it is necessary to update the firmware. Please continue to Step B.

### B. Download the firmware ZIP file from Pioneer's website:

Download the file named "**BDP-140\_V01.08.zip**" from the website to a folder on your computer.

### C. Create the System Firmware Update USB memory device:

USB memory device requirements:

- USB specification 2.0
- 128 MB or more in capacity
- Should be blank (should not contain any files)

### PROCEDURE:

1. Connect the USB memory device to your computer..
2. Double click the ZIP file named "**BDP-140\_V01.08.zip**" to open it.
3. Extract and save the files named "**BDP-140\_V01.08.bin**", "**DLdiscidentifier.txt**" and "**DVD.bin**" to a folder on your computer
4. Copy all the files to your USB memory device
5. Confirm that the file names and file sizes are correct on the USB memory device. To check the file size in Microsoft Windows, select the file, press the right mouse button, and select "Properties". If the file name and size do not match the ones listed below, perform steps B and C again.

BDP-140_V01.08.bin	49.9 MB (52,372,564 bytes)
DVD.bin	1.00 MB (1,048,576 bytes)
DLdiscidentifier.txt	23 bytes

## NOTE:

If the correct files are not copied to the USB memory device, your player will not recognize it as an update USB memory device and you will not be able to carry out the update.

## D. Update the player's system firmware:

### REMARKS:

- ✓ The update process takes approximately 2 minutes to complete.
- ✓ Before updating the system firmware, confirm that the disc tray is empty.
- ✓ When you insert or remove a USB memory device, be sure to turn the main power off.

### PROCEDURE:

1. Connect the USB memory device to the USB port on the player's front panel.  
Note: Be sure to connect your USB memory device to the USB port on the player's front panel. If your USB memory devices are already connected to both the USB ports on the player's front and rear panels, disconnect the USB memory device on the front and replace it with the USB memory device which contains the system firmware update files.
2. Press the "STANDBY/ON" button to switch on the unit.
3. Press the "HOME MENU" button to display the Home Menu screen.
4. Select "Initial Setup" and press the "ENTER" button.
5. Select "Options" and press the "ENTER" button.
6. Select "Update" and press the "ENTER" button.
7. Select "USB Storage" and press the "ENTER" button.
  - ✓ The following message "Now the update file is under searching! Please wait ..." is displayed on your TV and "Here an update file has been found! Start update with version?" is displayed when the player is ready to update.
  - ✓ If your USB memory device is not properly installed or the correct firmware update files cannot be found on your USB memory device, a message "No valid update file is found! Please insert the right one ..." is displayed. In this case, check the files on your USB memory device, and then reinsert it correctly into your player.
8. Press the "ENTER" button to start updating.
  - ✓ **Do not unplug the AC power cable during the updating process!**
  - ✓ "UPDATE" will be displayed on the front panel display of your player during the update process.

9. Wait for both the update and reboot process.
  - ✓ When the system firmware is successfully updated, a message "Update has completed successfully!" is displayed on your TV and "WAIT" will be displayed on the front panel display of your player during the reboot process.
  - ✓ The player will automatically start up after rebooting.
  - ✓ If the update fails, check the files in your USB memory device and try again.
10. Check the firmware version by the same steps described in section A.
  - ✓ If the version has not been updated, then perform the system firmware update again.
11. Press the "STANDBY/ON" button to switch the player off.
12. Disconnect your USB memory device after the player turns into standby mode.

## Firmware Update FAQ

**Q:** What do I do if the power cord is unplugged or a black out occurs during the update?

**A:** Power on the player and try again starting from section D. If the player does not start up, the player will need repair. In such an event, call Pioneer Customer Support Center.

**Q:** What do I do if the "UPDATE" message does not appear on the front panel display as described in step 8 of section D?

**A:** There could be a problem with the update USB memory device you created. Try downloading the firmware file again, create another update USB memory device, and follow section D to update the player's system firmware.

**Q:** What do I do if over 60 minutes have passed and the player remains in the update process or reboot process?

**A:** Unplug the power cord then plug the power cord back in. Power on the player and try again starting from section D. If the player does not start up, the player will need repair. In such an event, call Pioneer Customer Support Center.

## Contact Information

Pioneer Customer Support Center

<http://www.pioneer.eu>

-----  
Copyright(c) 2011 Pioneer Corporation